



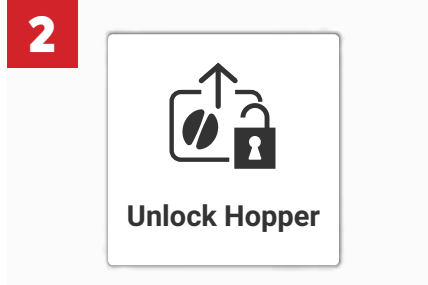
Egro Touch Coffee

Weekly Bean Hopper Cleaning

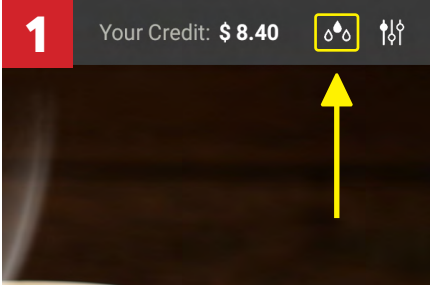

On the upper right corner of main screen, tap on the water drop icon to enter the Cleaning Menu .

Note: Cleanings can also be accessed through Cleaning and Settings .



Select Unlock Hopper.



Lift the entire hopper assembly straight up to remove it.

Note: The hopper locks will automatically reengage after 10 seconds. If the hopper assembly has not been removed after 10 seconds, repeat step 2.



Remove the lids and empty both halves of the bean hopper. Wipe clean with a dry cloth. If necessary, the bean hoppers can be cleaned with soap and water or in a dishwasher.



Refill the bean hopper assembly. Lower the hopper assembly down onto the black guides to reattach.

Note: The recessed line in the hopper should be facing outward. For the back hopper, the line should be facing towards the back of the machine.