

Egro NEXT

Weekly Bean Hopper Cleaning



1
Unlock the bean hopper by pulling the metal latch on the front of the bean hopper until it clicks. If installed, unlock the bean hopper lid with the provided key.



2
Lift the bean hopper to remove.



3
Remove the lid and empty the coffee beans into a container. Wipe the hopper clean with a dry cloth. Periodically, the hoppers can be cleaned with soap and water or in a dishwasher.



4
Once the hopper has been dried completely, refill with coffee beans.

To reattach the hopper, insert the back guides first. Push the metal latch forward until it clicks to lock the hopper.