

Egros Zero+


Daily Steam Wand Cleaning




Prepare solution by combining an Egros Milk System Tablet with 16 oz of water (or until steam tip is fully submerged).



Activate the steam wand until the solution is heated and allow the wand to soak in the solution for 10 minutes.

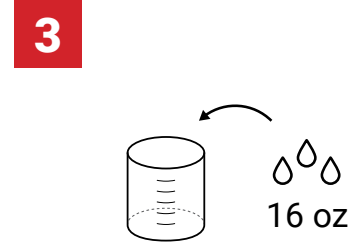

Dispose of the cleaning solution and refill with fresh water. Activate the steam wand until the water is heated.

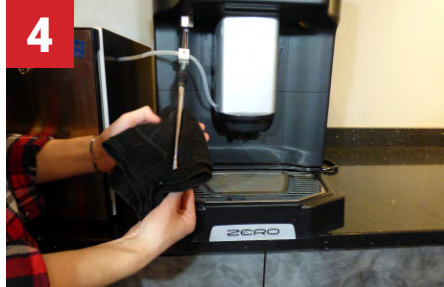

Dispose of the water and wipe the steam wand with a clean towel.



Cleaning Product Re-Order Information

To re-order the Egros Milk System Cleaning Tablets, please send your orders to: orders@ranciliogroupna.com

Egros Milk System Cleaning Tablets
Product # 69000426

We offer an Auto-Ship Cleaning Supplies Program to automatically ship cleaning products to you. Call (630) 914-7900 to learn more about our program.