


## Egro NEXT


### Daily Steam Wand Cleaning

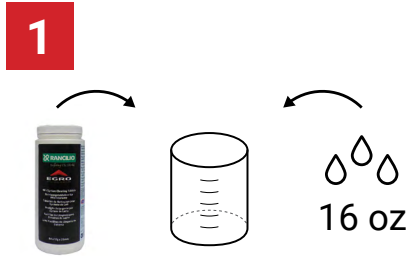

Prepare a cleaning solution by adding an Egro Milk System Cleaning Tablet to 16 oz of hot water.



Insert steam wand into the solution and ensure that the nozzle is submerged. Activate the steam wand and let the solution react for at least 10 minutes.

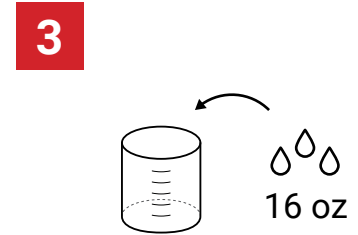

Remove the steam wand from the solution. Dispose of the cleaning solution and refill the container with clean water.



Reinsert the steam wand into the container with clean water and activate the steam wand again.



Remove the steam wand from the clean water. Wipe down the steam wand and activate the purge function. The steam wand is now ready for use.



### Cleaning Product Re-Order Information

To re-order the Egro Milk System Cleaning Tablets, please send your orders to: [orders@ranciliogroupna.com](mailto:orders@ranciliogroupna.com)

**Egro Milk System Cleaning Tablets**  
Product # 69000426

We offer an Auto-Ship Cleaning Supplies Program to automatically ship cleaning products to you. Call (630) 914-7900 to learn more about our program.